

## Instructions for using the putter and rods

Inside the box you will find the putter, two rods, an allen wrench & a target. The rods have a predetermined upward curvature to allow for the arcing swing of the putter. There are numerous settings on the Puttright™ training aid to challenge your skill level. Depending on the skill level of the user, these rods can be rotated so that the gap between each rod is increased or decreased. Increasing the gap would allow a lower skilled user to use the training aid by increasing the space for the golf ball to travel in both the backstroke and the follow through. Decreasing the gap would allow a more advanced user to hone their putting skills by decreasing the space for the golf ball to travel in both the backstroke and the follow through. The first setting is the beginning level, the final setting is the expert level and the intermediate level can be set in between and at your discretion. Simply loosen the set screws with the allen wrench provided. The rods can be inserted from either side for right handed use or left handed use. Insert the rods into the putter head until they become flush with the back of the putter. Adjust the rods to the level of difficulty which you want to practice at. Then tighten the set screws at the bottom of the putter head with the allen wrench provided. You are now ready to use the Puttright™ training aid with the target provided.



Diagram 1  
Insert Rods



Diagram 2  
Level 1  
Beginner

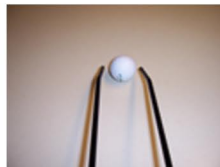


Diagram 3  
Level 2  
Intermediate



Diagram 4  
Level 3  
Expert



Diagram 5  
Tighten  
Screws

### Disclaimer

This is not a toy. Do not leave small children unattended with the Puttright training aid and target. When fully assembled please keep out of reach of children as misuse could cause bodily injury and harm. Target is also harmful if misused and possibly swallowed.